QUICK START GUIDE

 
EVE AUDIO SC203 MASTER/SLAVE SYSTEM

English




PACKAGE CONTENT ► Master + Slave Monitors

- ► Stereo Link Cable
- ► External PSU
- ▶ 2 x FlexiPad
- ▶ Product manual




AUDIO CONNECTIONS

- ► Connect the signal source with either both analog RCA L/R ins, the digital optical input or the USB port.
- ▶ Link both SC203 Master and Slave monitors using the provided 4-pin connection cable.

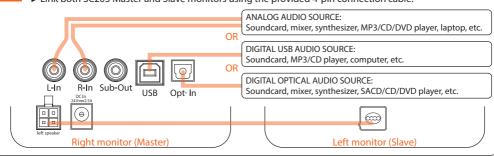

POWERING ON

 - Connect the Master monitor (right speaker) to AC mains power using the provided external PSU.
- On the Master monitor rear panel, make sure that the Satellite filter DIP switch is in OFF position.



SELECTING INPUT

- ▶ Briefly push the front-panel encoder to switch the system on.
- ▶ Push the encoder to enter menu: "Bal" LED should blink.
- ▶ Turn the encoder clockwise until "Input" LED starts blinking.
- ► A constantly lighting LED shows the selected input. Turn the encoder to select the input connected to the signal source:
 - Top LED (#12) is lighting: Analog RCA L/R inputs
 - Next LED clockwise (#13) is lighting: Digital optical input
 - Next LED clockwise (#14) is lighting: USB port
- ► Push & hold the encoder for 3 sec. or don't touch it for 10 sec. to guit the menu.
- ► Turn the encoder to adjust the system volume and refer to the product manual to know everything on your SC203 system!

